



DR7100 Supplementary instructions

Guided Radar (TDR) Level Meter for 2-wire control systems

Supplementary Instructions for FOUNDATION Fieldbus communication



1	General safety information	3
1.1	Scope of the document	3
1.2	Device description	3
1.3	Scope of delivery	3
2	FOUNDATION Fieldbus data	4
3	Electrical connections	5
3.1	Electrical installation: terminals	5
3.2	Electrical connection: PACTware™	6
4	Operation	7
4.1	Description of device data	7
4.1.1	Resource block	7
4.1.2	Transducer block	7
4.1.3	Measurement data	8
4.1.4	Status data	8
5	Notes	9

1.1 Scope of the document

These instructions are applicable only to the TDR level transmitter with the FOUNDATION Fieldbus communication option. For all other data, use the Quick Start and other chapters of the Handbook. If you do not have these documents, please contact the nearest office or download them from the manufacturer's internet site.



INFORMATION!

The information in this chapter only contains the data applicable to FOUNDATION Fieldbus communication. The technical data in the Handbook shall be valid in its current version, provided that it is not rendered invalid or replaced by this supplement.

1.2 Device description

This device is a 4-wire level transmitter that uses TDR (Time Domain Reflectometry) / Guided Radar technology. The device measures the level, distance, volume and mass of liquids, liquid gases, pastes, powders, slurries and granular products. It is also suitable for the continuous and simultaneous measurement of level and interface of 2 liquids. Measurements are displayed via a DTM (device type manager) for remote communication or an optional integrated display screen with wizard-driven setup and online help functions.

The level transmitter is approved for use in potentially explosive atmospheres when equipped with the appropriate options.

1.3 Scope of delivery

The information in this chapter only contains the data applicable to FOUNDATION Fieldbus communication. The technical data in the Handbook shall be valid in its current version, provided that it is not rendered invalid or replaced by this supplement.

A device for FOUNDATION Fieldbus communication is supplied with

- Supplementary Instructions for FOUNDATION Fieldbus communication
- Device description (DD) and capability (CCF) files on a CD-ROM supplied with the device

**INFORMATION!**

- *The data that follows is applicable only for fieldbus communication networks. For general data, refer to the handbook.*
- *Additional information (certificates, special tools, software, files...) and complete product documentation is on the CD delivered with the device or can be downloaded free of charge from the website .*

Type	TDR level transmitter
Output signal	Digital signal that agrees with the FF communication protocol
Test status	Registered

Data blocks

Registered features	Alarms, events, function blocks, linking and trending
Registered function blocks	1 x Resource Block (RB)
	4 x Analog Input Blocks (AI)
	Analog Input Blocks: 50 ms
Other blocks	1 x Transducer Block (TB)
Communication Standard	Foundation Fieldbus protocol that agrees with IEC 61158-2
ITK version	5.1

Physical layer

Protocol	Foundation Fieldbus protocol that agrees with IEC 61158-2, galvanically isolated
Physical layer types	Standard power signaling, bus powered, non I.S.
Other features	Bus interface with integrated reverse polarity protection

Electrical connections

Device power supply (24 V input)	18...30 VDC
Bus power supply	9...32 VDC (non-Ex); 9...17.5 VDC (intrinsically-safe)
Basic current	20 mA
Maximum error current	20 mA
Start current after 10 ms	20 mA
Polar sensitivity	Yes
Minimum cycle time	100 ms

Input and output

Output data	Level, distance, level conversion, interface level, interface distance, layer, interface conversion, ullage conversion, layer conversion, level conversion, level mass or distance mass
Input data	None
Error current FDE	Typically 0 mA (FDE =Fault Disconnection Electronic)
Link Master function	Not supported

3.1 Electrical installation: terminals

Electrical connection must agree with IEC 61158-2.

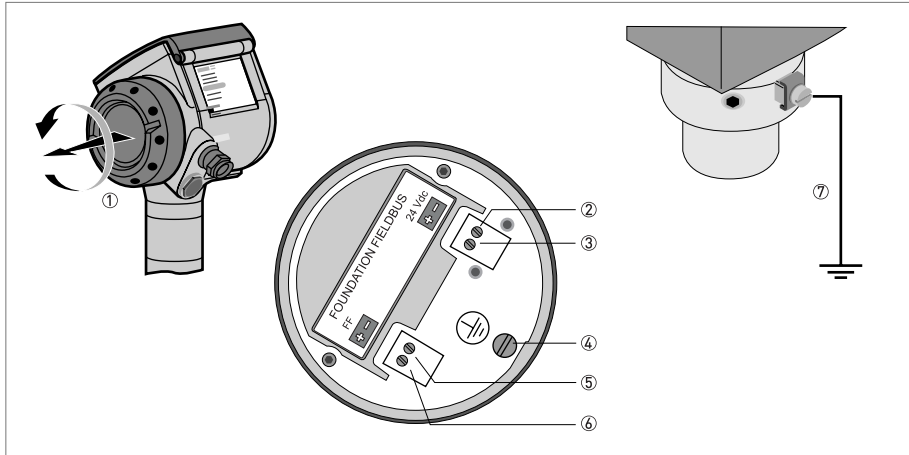


Figure 3-1: Electrical installation

- ① Terminal compartment cover
- ② Power supply terminal: 24 VDC -
- ③ Power supply terminal: 24 VDC +
- ④ Grounding terminal in the housing
- ⑤ Communication terminal: -
- ⑥ Communication terminal: +
- ⑦ Grounding terminal between the process connection and the converter



INFORMATION!

The FF terminal is connected to a Fieldbus Power Hub. The 24 VDC terminal energizes the device.



Procedure:

- Remove the housing terminal compartment cover ①.
- Connect the FF segment to the communication terminals ⑤ and ⑥ of the device. Obey the national electrical codes and fieldbus specifications for communication networks.
- Make sure that the polarity of the wires is correct.
- Connect the power supply to the power supply terminals ② and ③ of the device. Obey the national electrical codes.
- Make sure that the polarity of the wires is correct.
- Attach the ground to ④ or ⑦. Both terminals are technically equivalent.

3.2 Electrical connection: PACTware™



CAUTION!

Before you use PACTware™ to configure the device, disconnect the device from the FOUNDATION Fieldbus segment.



CAUTION!

The HART address of the device must be set to "1". If the device is not set to "1", the device will not operate in FOUNDATION Fieldbus networks. Refer to the Handbook for more data on how to change the HART address.

PACTware™ is an Open Source, open configuration software for all field devices. Use PACTware™ to configure your device. For more data, refer to "Start-up" in the handbook.

Attach a HART® converter to the terminals shown in the illustration that follows. We recommend the VIATOR converter that is available as an accessory for this device. Refer to the Handbook for more data on accessories.

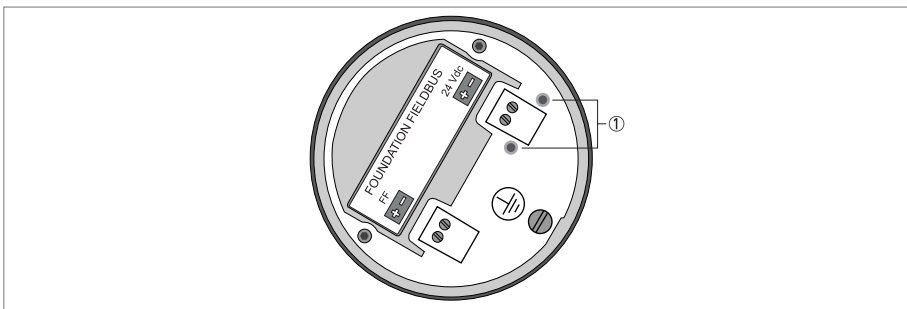


Figure 3-2: Electrical connection: PACTware™

① PACTware™ terminals

4.1 Description of device data

4.1.1 Resource block

The Resource Block supplies data about the device for operation in the FOUNDATION Fieldbus network. Its operation mode also has an effect on the data supplied by the device. The Resource Block has these operation modes:

- Automatic (Auto), and
- Out of Service (OOS)

In **Automatic** mode, all resources (including Transducer and Function blocks) can operate correctly.

In the **Out of Service** mode, all blocks are in Out of Service mode and no measurement and status data is supplied to the network. The blocks cannot change their mode until the Resource block is set again to Automatic mode. If a block is in Out of Service mode, this is shown in its BLOCK_ERR parameter.

4.1.2 Transducer block

The parameter MODE_BLK controls the mode set in the Transducer Block. The Transducer Block has these modes:

- Automatic (Auto),
- Manual (MAN), and
- Out of Service (OOS)

In **Automatic** mode, the Transducer operates correctly and supplies measurement values and status (PRIM_VAL_TYPE_0 to PRIM_VAL_TYPE_).

The Transducer Block has a special error parameter **XD_ERROR**. If this parameter displays the error 'Electronics failure', it is possible that the device will not operate correctly. If the Transducer Block status does not change, please contact the local support desk of your supplier.

4.1.3 Measurement data

Use a master and the DD - CFF files to configure the device for the network. Set the measurement values (modules) that are regularly transmitted to the master device. The table that follows gives a list of measurement data (each value has a status) that is available in this sequence.

Measurement data

Foundation Fieldbus Variable	Measurement variable	Unit
PRIM_VAL_TYPE_0	Level ①	Meter
PRIM_VAL_TYPE_1	Distance ①	Meter
PRIM_VAL_TYPE_2	Interface Level ②	Meter
PRIM_VAL_TYPE_3	Interface Distance ②	Meter
PRIM_VAL_TYPE_4	Layer ③	Meter
PRIM_VAL_TYPE_5	Interface Conversion ④	Cubic meter
PRIM_VAL_TYPE_6	Ullage Conversion ⑤	Cubic meter
PRIM_VAL_TYPE_7	Layer Conversion ⑥	Cubic meter
PRIM_VAL_TYPE_8	Level Conversion ⑦	Cubic meter
PRIM_VAL_TYPE_9	Level Mass ⑦	Ton (metric)
PRIM_VAL_TYPE_10	Distance Mass ⑦	Ton (metric)

- ① If the "Application Mode" value (in the device Quick Setup menu) is set to "Interface only", this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".
- ② If the "Application Mode" value (in the device Quick Setup menu) is set to "Level only", this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".
- ③ If the "Application Mode" value (in the device Quick Setup menu) is set to "Level only" or "Interface only", this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".
- ④ If the "Application Mode" value (in the device Quick Setup menu) is set to "Level only" and there is no conversion table, this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".
- ⑤ If there is no conversion table, this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".
- ⑥ If the "Application Mode" value (in the device Quick Setup menu) is set to "Level only" or "Interface only" and there is no conversion table, this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".
- ⑦ If the "Application Mode" value (in the device Quick Setup menu) is set to "Interface only" and there is no conversion table, this measurement is not available. The message "Not_a Number (non signalling)" is transmitted. The status is set to "Bad-Out of Service".

4.1.4 Status data



CAUTION!

Monitor the status of the device. The device transmits a measurement value when the device status is "good", "uncertain" or "bad". The status will tell you if the device measures correctly.







AMETEK Drexelbrook makes no warranty of any kind with regard to the material contained in this manual, including, but not limited to, implied warranties or fitness for a particular purpose. Drexelbrook shall not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of material.

© Copyright AMETEK Drexelbrook

AMETEK[®]
DREXELBROOK

U.S. and Canada: 1-800-553-9092

24-Hour Service: 1-800-527-6297

International: +1 215-674-1234

Fax: +1 215-674-2731

E-mail: drexelbrook.service@ametek.com

Website: www.drexelbrook.com